



MANUAL

Z2R – Float Flow Meter with regulator on inlet


- Quality design
- High corrosion resistance
- Reliable measurement principle
- Low weight and small dimensions

Installation, operation and maintenance

Working position vertical with media flow from the bottom. Before connecting the flowmeter it is necessary to ensure the purity of the pipeline.

Operation and maintenance is limited to checking for leaks and cleaning the measuring tube. Avoid pressure shocks that could cause damage to the measuring tube.

Connecting dimensions

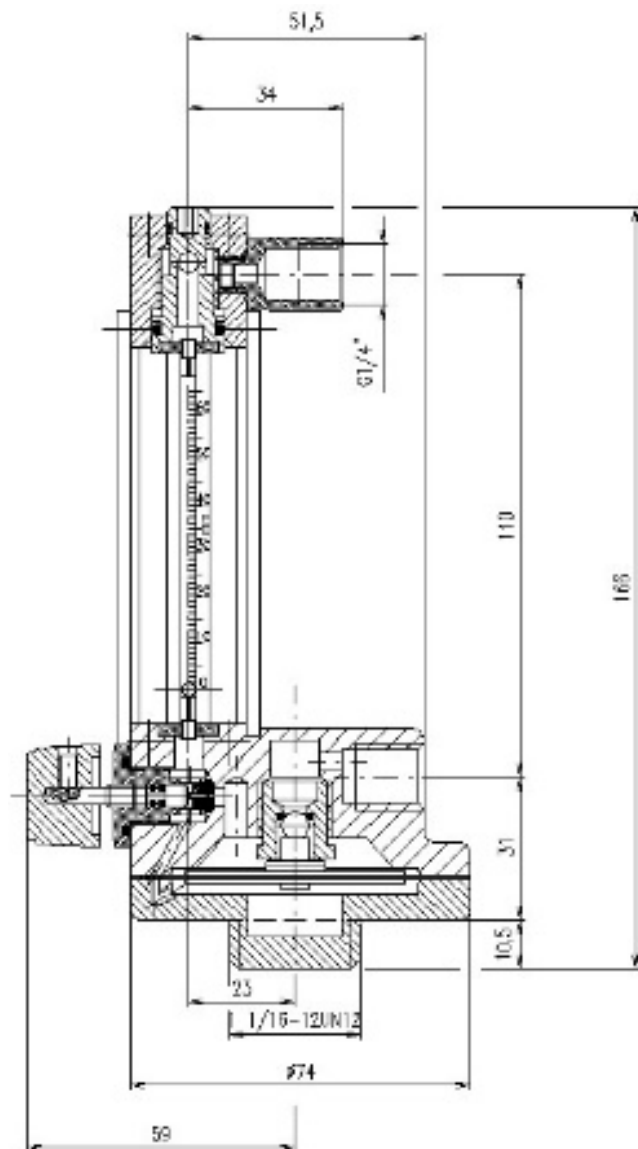

Caution

Max. allowable operating pressure of the pressure regulator (at 20°C): 1.6 Mpa

Max. operating temperature of the pressure regulator: 80°C (optional 100°C)

For operating of the regulator is necessary minimum pressure (see. regulator characteristics)

Pressure regulator is not a pressure reduction valve